


SMOK®

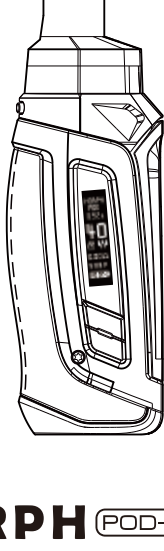

MORPH POD-40 KIT

Introduction

From the perspective of ergonomics and utility, MORPH POD-40 reveals the upgraded integration of aesthetics and creativity. It is a stylish pod mod with an adjustable airflow bar, powered by the enhanced chipset that delivers up to 40 watts of power. The 3.7ml pod comes with two RPM coils and is compatible with the RPM coil series to maximize the coil adaptability. Innovation keeps changing the vaping experience!

Introduction



- 1 x MORPH POD-40 Device (2000mAh)



- 1 x MORPH POD-40 Empty RPM Pod (3.7ml)



- 1 x RPM Mesh 0.4Ω Coil



- 1 x RPM Triple Coil 0.6Ω



- 1 x Type-C Cable



- 1 x User Manual

English / 01

Specifications

Product Category: Electronic Cigarette
Size: 37.2*28.35*108.35mm
Weight: 119.5g
Input Voltage: 3.3V-4.2V
Output Voltage: 0.5V-4.0V
Output Power: 5W-40W
Battery Capacity: 2000mAh
Standby Current: <120uA
Load Resistance Range: 0.3Ω-2.5Ω
Charging Voltage: 5V±0.2V
Charging Current: 1.4A (Max)

Verification

Note: Please carefully keep the AB verification codes on the package. AB verification codes are required and will be used in product verification and after-sales service.

1. Please download and install IVPS Tour APP.
2. Please download and install IVPS Tour APP. new-anti-counterfeiting-system, and then follow the steps described in THE NEW ANTI-COUNTERFEITING SYSTEM to verify your product.
3. Only verified products can get the warranty service.
4. If you have any questions, please contact SMOK via e-mail, phone or our website to get more help.



The Warranty Card should be filled out by the vendor as proof of the store warranty. Please carefully keep the anti-counterfeiting label with the product packaging if you need a factory warranty.

Warranty

MORPH POD-40 Warranty Period: 6 Months from the Purchase Date.

Within the 6 Months, some items may not be eligible for service due to misuse, damage, or other failures caused other than by manufacturer defects or premature failure. Please contact SMOK Authorized Vendor for more information and terms of service.

The Warranty Card should be filled out by the vendor as proof of the store warranty. Please carefully keep the anti-counterfeiting label with the product packaging if you need a factory warranty.

English / 02

Getting Started

Please read this manual carefully before using the product.

Preparing your MORPH POD-40 device for use

Unpeel the plastic films of the device before use.

Charging

The MORPH POD-40 device is charged using the USB cable provided. When the USB cable is inserted, the charging interface will appear and display the battery charge level (%) and estimated charge time.



Important information about charging

- The product should be charged between 10°C to 45°C / 50°F to 113°F.
- Do not charge this product outdoors or in a hot, cold, damp environment or in direct sunlight as short circuit may occur.
- Unplug the USB cable within 2 hours of the battery being fully charged to extend the life of the battery. Do not overcharge the batteries.
- Only use the original USB cable provided and UL-listed charging sources.
- Do not use this product if abnormal heat is generated during charging.
- Do not use any power source without legal manufacturing licenses.
- Do not charge this product near:
 - Any source of heat, such as a fire, hot stove or a radiator.
 - Combustible or explosive materials or gas.

English / 04

For more warranty policies and processes, please visit our official website:
<http://www.smoktech.com/support/>.

SMOK Hearty Service

If you need after-sales service, please send e-mails to support@smoktech.com.

Your MORPH POD-40 device



MORPH POD-40 device



MORPH POD-40 device with pod removed



- Coil head
- Coil (Resistance is written on coil)
- Colored rubber bands




English / 03

How to fill with e-liquid

You must fill the Pod with e-liquid before using the MORPH POD-40 device:

- (1) Open the slot on the pod by pulling back the rubber plug.
- (2) Inject up to 3.7ml/ 0.13 fl oz of e-liquid into the slot and press the rubber plug back carefully and firmly.
- (3) Firmly push the pod back into the MORPH POD-40 device.
- (4) Wait 2-3 minutes before vaping.

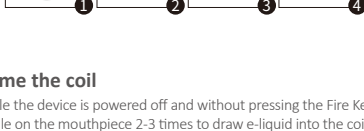

Prime the coil

While the device is powered off and without pressing the Fire Key inhale on the mouthpiece 2-3 times to draw e-liquid into the coil. Priming the coil before use optimizes the vaping experience and avoids burning the coil.

Using your MORPH POD-40 Device

1. Power On

While the device is off, quickly press the Fire Key 5 times in 2 seconds to turn it on. The screen displays the product logo and the version number, and then enters the main interface.



2. Check the mouthpiece is clean

Before vaping check that the mouthpiece is clean. Do not inhale if the mouthpiece is dirty or contains foreign objects.

English / 05

3. Setting the wattage

To set the wattage of the device: Press the UP/DOWN button to adjust the wattage settings from 5W to 40W.

To lock/ unlock the wattage setting: Press the UP and DOWN buttons simultaneously to lock or unlock the wattage setting.

4. Vaping

While the device is on, put the device in your mouth and inhale while pressing the Fire Key.


- Do not vape for more than 8 seconds.
- A TIME OVER notification will occur if vaping exceeds 8 seconds.

5. Locking/ Unlocking the Fire Key

Locking the Fire Key avoids accidentally modifying any settings. To lock or unlock the device quickly press the Fire Key 3 times.

6. Puff Setting

The Device counts the amount of puffs that are taken. Press the Fire Key and DOWN button simultaneously to enter the PUFF CLEAR function, then select YES and long press the Fire Key to clear the number of puffs.



7. Flip Screen

Press the Fire Key to switch to FLIP SCREEN function, then press the UP/DOWN button to select the screen direction, and long press the Fire Key to confirm the direction.



English / 06

On screen notifications

The meaning of the on screen notifications is described below:

Prompt (H.: Horizontal; V.: Vertical)	Details
BATTERY LOW (H.)	The battery voltage is lower than 3.3V±0.1V before vaping.
BATTLOW (V.)	The battery voltage is lower than 3.0V±0.1V when vaping. (Please charge the device)
POWER OFF	The battery voltage is lower than 3.1V±0.1V. (Please charge the device to activate the system after low battery shutdown)
OHMS TOO LOW (H.)	Watt mode: the atomizer resistance is lower than 0.3Ω±5%
OHMSLOW (V.)	
OHMS TOO HIGH (H.)	Watt mode: the atomizer resistance is higher than 2.5Ω±5%
OHMSHIGH (V.)	
NO ATOMIZER (H.)	Atomizer hasn't been detected.
NOATTY (V.)	
ATOMIZER SHORT (H.)	Short circuit has been detected.
ATTY SHORT (V.)	
PCB TOO HOT (H.)	The temperature of PCBA is too high, and high-temperature protection starts.
PCBHOT (V.)	
TIME OVER	The vaping time is longer than 8 seconds.
POWER LOCK	The vaping function is locked (you can't vape when locked).
POWER UNLOCK	The vaping function is unlocked.
WATT LOCK	Prompt when the locked UP/DOWN button is pressed.
WATT UNLOCK	Prompt when the UP/DOWN button is unlocked.

English / 08

IMPORTANT SAFEGUARDS

Attention

Please read this manual carefully before using the product. Inappropriate use or handling of this product may be harmful.

- This product is only intended to be used as an e-cigarette, for the consumption of certain e-liquids. **Do not** use this product for any other purpose. This product is not designed to be a smoking cessation device.
- Please use the tank/pod provided in this kit. **Do not** use tanks/pods of other brands with this kit.
- The suggested ratio of e-juice is 30% PG: 70% VG.
- Before using this product, please read carefully any information and instructions for use relating to the e-liquid which is vaped using this product.
- Always check that the e-liquid has not expired.
- The SMOK product must not be offered for sale outside of, independently or separately to, the box or this leaflet.
- Do not vape excessively. If you feel unwell vaping, including if you have a headache or are feeling nauseous stop vaping immediately and seek medical attention.

Caution

- **Handle this product with care at all times:**
 - Avoid damage to the product's internal and external components.
 - Keep this product dry at all times. **Do not** immerse this product in water as the product is not waterproof. **Do not** immerse this product in corrosive or conductive solution as serious damage like short circuit may occur.
 - **Do not** attempt to disassemble or assemble the product as damage or personal injury may occur.
 - Avoid e-liquid contact with skin or other parts of your body, if

English / 10

you get any on your skin promptly wash it off with running water.

- Mechanical shock, extrusion, beating, or shaking to the device is strictly forbidden to prevent damage to circuit and battery cell.

- **Do not** place the product in a hot or humid environment.

- **Do not** expose your product to heat, cold, damp conditions or direct sunlight.

- KEEP THIS PRODUCT OUT OF REACH OF CHILDREN.

• If you drop this product, make sure:

- (1) the product is not broken, cracked or smashed;
- (2) there is no leaking or leakage of e-liquid;
- (3) components are not loose and have not come apart;
- (4) the product functions normally and as intended;
- (5) there is no damage to the mouthpiece and the mouthpiece is free of foreign objects.

• Important information about using this product:

- Do not eat, drink, or smoke while using this product.
- This product should only be used between 10°C to 55°C / 50°F to 131°F.
- Vaping products, including this product, should not be used in prohibited or restricted areas.
- Vaping products, including this product, should not be used in high oxygen environments.
- We recommend that you **do not** use vaping products, including this product, whilst driving or operating machinery.
- Using electronic cigarettes may create undesirable effects to you and the people around you.

• DO NOT use this product if :

- broken, leaking, if parts are cracked or deformed, or if the product has malfunctioned.
- the mouthpiece is not clean or contains foreign objects.
- abnormal heat occurs during vaping or charging.
- there is concerning leakage of e-liquid from the pod.
- conductive or corrosive liquids enter the device.
- there is any perceptible change in flavor of the e-liquid.
- microbial contamination or other contamination is suspected.
- the pod is empty or almost empty during use. E-liquid should always be in the pod to avoid dry heating and burning the coil.

English / 11

- THIS PRODUCT SHOULD BE SERVICED EVERY 6 MONTHS.

If the product fails a service, **Do not** use. Defective items and parts must be replaced before re-use. (See section: Servicing)

• When not in use, the product must always be stored:

- In a secure location, out of reach of children and away from animals.
- In a dark, dry and well-ventilated indoor environment away from direct sunlight.
- At room temperature, below 30°C / 86°F.
- Separate and away from food and drink.
- Separate and away from medical products and medication.
- In a secure upright position on a flat surface to prevent falling over and e-liquid leakage.

• DO NOT store this product under the following conditions:

- Outdoors or in a car
- In a hot, cold or damp environment
- In direct sunlight
- Near any source of heat or combustible materials or gases

• If the product is not going to be used for 2-3 days:

- Remove the pod and dispose of the e-liquid in accordance with local regulations. (See: Disposal) E-liquid should be removed to avoid e-liquid penetrating into the product and shortening the product's life-expectancy.
- Store with rubber plug out of the Pod.
- Seal off the battery and mouthpiece and store them separately.

Warnings

• KEEP THIS PRODUCT OUT OF REACH OF CHILDREN

- This product is intended to contain nicotine-contain ing e-liquid. NICOTINE CONTAINING E-LIQUID IS DANGEROUS. CHILDREN MUST NOT GAIN ACCESS TO E-LIQUIDS.

- This product contains small parts which may pose a choking hazard to children.

English / 12

• Health Warning

The health warning below applies when the product is used as intended and charged / filled with nicotine-containing e-liquid.



- This product is suitable only for persons over 18 or over 21, depending on the legal smoking age in your country/region.



- This product is not recommended for women that are pregnant or breastfeeding.

• Recommendation regarding young people and non-smokers

- This product is not recommended for use by young people and non-smokers.

• Contra-indications for vulnerable groups

- This product is not suitable for:
 - Persons who are ill or have certain medical conditions.
 - Persons taking certain medication.
 - Persons with certain allergies.

Servicing

- THIS PRODUCT SHOULD BE SERVICED EVERY 6 MONTHS. If the product fails a service, **do not** use. Defective items and parts must be replaced before re-use.

- This product should be serviced by a reputable e-cigarette dealer. Please retain a copy of your guarantee and provide dealers with the guarantee for servicing.

- If this product fails a service, is broken, or otherwise malfunctions: **do not** use this product, and dispose of this product appropriately.

English / 13

Cleaning

- Clean the product regularly, particularly the mouthpiece.
- To clean the product wipe with a dry cloth. **Do not** clean the device with detergent or other cleaning fluids.

- Where necessary, take the product for a service to a reputable e-cigarette dealer with the guarantee. (See section: Servicing)

SAVE THESE INSTRUCTIONS!

English / 14